

INSTRUCTIONS FOR USING
ATS CONTROLLER ATbS C56





- Operating Voltage: AC170V~277V during AC power L1N1/L2N2 supply
- AC Voltage Input: 170V – 277V (L-N); 295V – 475V (L-L)
- AC Line system: 3P4W, 2P3W, 1P2W
- Rated Frequency: 50/60Hz
- Suitable use for ATS ON – OFF – ON / ATS ON – ON / 2 ACB / 2 Contactor
- Protection function: Over/under voltage, loss of phase, phase sequence wrong, over/under frequency
- Working Temperature: - 25°C to +55°C
- Working Humidity: 95%
- Case Dimensions: 139x120x50mm (Panel Cutout 130x111mm)

CONTENT

1 OVERVIEW	4
2 PERFORMANCE AND CHARACTERISTICS	5
3 SPECIFICATION	6
4 OPERATION.....	7
4.1 OPERATION PANEL.....	7
4.2 KEY FUNCTION DESCRIPTION.....	7
5 LCD DISPLAY	8
5.1 MAIN SCREEN	8
5.2 MAIN MENU INTERFACE	9
6 PARAMETERS CONFIGURATION	10
6.1 ILLUSTRATION.....	10
6.2 PARAMETERS TABLE.....	11
6.3 INPUT/OUTPUT FUNCTION DESCRIPTION	14
7 EVENT LOG	16
8 SCHEDULED START	17
9 COMMISSIONING.....	17
10 DATE AND TIME SETTING.....	18
11 LANGUAGE SETTING	18
12 CONTROLLER INFORMATION	18
13 ATS OPERATION.....	19
13.1 MANUAL OPERATION	19
13.2 AUTOMATIC OPERATION.....	19
13.3 ATS POWER SUPPLY	19
14 FAULT ALARM	20
15 COMMUNICATION CONFIGURATION.....	20
16 DESCRIPTION OF CONNECTING TERMINALS	21
17 TYPICAL WIRING DIAGRAM.....	23
18 INSTALLATION	28
19 FAULT FINDING.....	28

1 OVERVIEW

ATBS C56 series dual power ATS controller is an intelligent dual power supply module integrated with configurable function, automatic measurement, LCD display, and digital communication. It combines digitalization, intelligence and networking together, which realizes automation for measuring and control process, reducing artificial operation mistakes. It is the ideal product for dual power transfer.

ATBS C56 series dual power ATS controller is made with the microprocessor in the core, which can precisely measure 2-channel 3-phase/single phase voltages, make correct judgment for occurred voltage abnormal (over voltage, under voltage, loss of phase, over frequency, under frequency) and output discrete volt free control signals. This device is designed after considering various applications in ATS (load auto transfer system), and can be used for specialized ATS switch, ATS with connector composed, and ATS made by air switch etc. It has compact structure, advanced circuits, simple wiring and high reliability, and can be widely used in electrical devices, automatic control and testing system of electric power, telecommunications, petroleum, coal, metallurgy, railways, municipal administration, intelligent building etc.

2 PERFORMANCE AND CHARACTERISTICS

- 1) System type can be set to: Mains (1#) & Generator (2#), Generator (1#) & Mains (2#), Mains (1#) & Mains (2#) Generator (1#) & Generator (2#);
- 2) 132x64 LCD with backlight , optional Chinese and English display, push button operation;
- 3) Measure and display 2-channel 3 phase voltage and frequency:

1#	2#
Line voltage (Uab Ubc Uca)	Line voltage (Uab, Ubc, Uca)
Phase voltage (Ua Ub Uc)	Phase voltage (Ua, Ub, Uc)
Frequency Hz	Frequency Hz
- 4) Over/under voltage, loss of phase, reverse phase sequence, over/under frequency protection function;
- 5) Auto/Manual mode transfer function: in manual mode, it can force the switch to close or open;
- 6) All parameters are configurable. Two level password ensures authorized staff operation only.
- 7) On-load or Off-load commissioning operation on the genset can be set on site;
- 8) ATS Controller has function of automatic Re-closing.
- 9) Breaker close output can be set to pulse or steady output;
- 10) Applicable for ATS of one neutral position, two neutral position and non position.
- 11) Design of 2 isolated neutral line.
- 12) Real-time clock (RTC).
- 13) Event log function allows to record 50 items circularly.
- 14) Scheduled start & stop generator function: running once monthly/weekly, and on-load/off-load running are configured ;
- 15) It can control two generators to work cyclically , and genset running time and crank rest time can also be set.
- 16) Optional AC system or DC system.
- 17) LINK communication port: has “remote control, remote measuring, remote communication” function with ModBus communication protocol; genset start, genset stop, ATS close/open can be controlled remotely;
- 18) Current controller status can be checked (digital input port, digital output port, over voltage, under voltage , over frequency, under frequency etc. circuit abnormal statuses);
- 19) Suitable for various wiring connection type (3 phase 4 wire, 3 phase 3 wires, single phase 2 wire, and 2 phase 3 wire);
- 20) Modular design, self-extinguishing ABS plastic shell, pluggable terminal, built-in mounting, compact structure with easy installation.

Table 2 ATBS C56 Series Model and Function Comparison

Function			
Type	DC Power Supply	AC Power Supply	AC Current/Power
ATBS C56	√	×	×
ATBS C56B	√	√ (LN220V)	×

3 SPECIFICATION

Table 3 Technical Parameters

Items	Contents		
Operating Voltage	1. DC 8.0V~35.0V continuous 2. AC(170V~277V), AC power L1N1/L2N2 supply		
Power Consumption	<3W (Standby mode: <2W)		
AC Voltage Input	AC system	ATBS C56	ATBS C56B
	3P4W (ph-N)	AC30V~AC360V	AC170V~AC277V
	3P3W (ph ph)	AC60V~AC620V	N/A
	1P2W(ph N)	AC30V~AC360V	AC170V~AC277 V
	2P3W (ph N)	AC30V~AC360V	AC170V~AC277 V
Rated Frequency	50/60Hz		
Close Relay Output	16A AC250V Volts free output		
Auxiliary Relay Output 1	7A AC250V Volts free output		
Auxiliary Relay Output 2	7A AC250V Volts free output		
Auxiliary Relay Output 3	16A AC250V Volts free output		
Auxiliary Relay Output 4	16A AC250V Volts free output		
Digital Input	GND connected is active		
Communication	LINK interface, MODBUS Protocol		
Case Dimensions	139mmx120mmx50mm		
Panel Cutout	130mmx111mm		
Working Temperature	(-25~+70)°C		
Working Humidity	(20~93)%RH		
Storage Temperature	(-25~+70)°C		
Protection Level	IP55 Gasket: when there is waterproof gasket installed between controller and the control panel		
Insulation Strength	Apply AC2.2kV voltage between high voltage terminal and low voltage terminal and the leakage current is not more than 3mA within 1min		
Weight	0.62kg		

4 OPERATION







4.1 OPERATION PANEL



Fig.1 Front Panel

4.2 KEY FUNCTION DESCRIPTION

Table 4 Key Function Description

Key	Function	Description
	I# Manual Close	In manual mode, press and 1# power connects with load
	Open	In manual mode, press and disconnect 1# or 2# load
	II# Manual Close	In manual mode, press and 2# power connects with load
	Manual/Auto Set	Press and controller can be set to Manual or Auto mode
	Menu/Confirm	Press and enter menu interface; press for longer and exit from current operation and return to main screen; For controller fault alarms, press for 3s, and alarms can be cleared
	Screen Scroll/ Decrease	Transfer display interface; Value decrease key for adjusting parameters in parameter setting page; Press for 3s, LCD backlight shall flash for once and enter backlight always on mode; and press again for 3s, LCD backlight is off and recovers to normal display mode

5 LCD DISPLAY

5.1 MAIN SCREEN

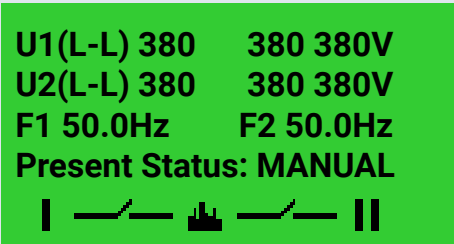

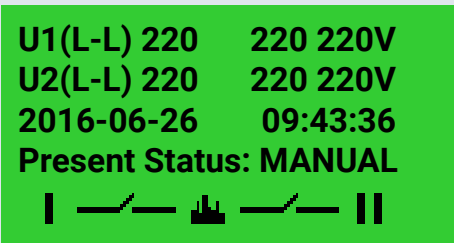

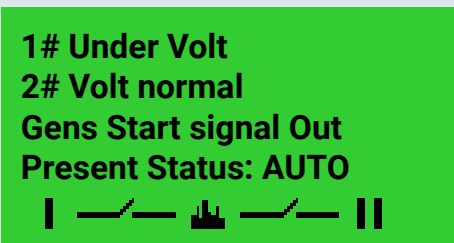

 <p>U1(L-L) 380 380 380V U2(L-L) 380 380 380V F1 50.0Hz F2 50.0Hz Present Status: MANUAL </p>	<p>This screen shows: 1#/2# line voltage (L1-L2, L2-L3, and L3-L1), frequency, controller working status, close load information</p>
 <p>U1(L-L) 220 220 220V U2(L-L) 220 220 220V 2016-06-26 09:43:36 Present Status: MANUAL </p>	<p>This screen shows: 1#/2# 3 phase Voltage (L-N), real-time clock, controller working status, close load information</p>
 <p>1# Under Volt 2# Volt normal Gens Start signal Out Present Status: AUTO </p>	<p>First line: 1# working status Second line: 2# working status Third line: other working status Fourth line: action status or alarm information. Fifth line: close load information</p>

Table 5 #1 Status (upper to lower)

No.	Item	Type	Description
1	1# Gens Fault	Fault	When 1# genset fault occurs, this will display
2	1# Fail to Close	Fault	When 1# close failure occurs, this will display
3	1# Fail to Open	Fault	When 1# open failure occurs, this will display
4	1# Over Voltage	Indication	When 1# power supply voltage has exceeded the set value, this will display
5	1# Loss of Phase	Indication	Loss of any phase of A, B and C
6	1# Over Freq	Indication	When 1# power supply frequency is higher than the set value, this will display
7	1# Under Freq	Indication	When 1# power supply frequency has fallen below the set value, this will display
8	1# Under Volt	Indication	When 1# power supply voltage has fallen below the set value, this will display
9	1# Phase Seq. Wrong	Warning	Phase sequence is not A-B-C
10	1# Volt Normal	Indication	1# power supply voltage is within the setting range


Table 6 #2 Status (upper to lower)

No.	Item	Type	Description
1	2# Gens Fault	Fault	When 2# genset fault occurs, this will display.
2	2# Fail to Close	Fault	When 2# close failure occurs, this will display.
3	2# Fail to Open	Fault	When 2# open failure occurs, this will display.
4	2# Over Voltage	Indication	When 2# power supply voltage has exceeded the set value, this will display.
5	2# Loss of Phase	Indication	Loss of any phase of A, B and C
6	2# Over Freq	Indication	When 2# power supply frequency is higher than the set value, this will display
7	2# Under Freq	Indication	When 2# power supply frequency has fallen below the set value, this will display
8	2# Under Volt	Indication	When 2# power supply voltage has fallen below the set value, this will display
9	2# Phase Seq. Wrong	Warning	Phase sequence is not A-B-C
10	2# Volt Normal	Indication	2# power supply voltage is within the setting range

Table 7 Other Status (upper to lower)

No.	Item	Type	Description
1	Trip Alarm	Fault	Trip alarm input is active
2	Forced Open	Warning	Forced open input is active
3	Gens Start Out	Indication	Start input is active
4	Remote Start Input	Indication	This input is active when start the genset circularly


▲NOTES:


Fault: When fault occurs, indicators will flash and this fault signal won't be removed until  is pressed for 3s;

Warning: When warning alarm occurs, alarm indicator will flash while it will extinguish when warning alarm is inactive.

That is to say, warning alarm is not latched.

5.2 MAIN MENU INTERFACE




In the main screen, press  key and enter into the main menu interface.


<ol style="list-style-type: none"> 1. Exit 2. Parameters Setting 3. Event Log 4. Scheduled Start 5. Commissioning 	<p>Press  key to choose parameters (the current line was highlighted with black) and then press  key to confirm, then enter into the corresponding display screen</p>
<ol style="list-style-type: none"> 4. Scheduled Start 5. Commissioning 6. Date/Time 7. Language 8. Information 	

6 PARAMETERS CONFIGURATION






6.1 ILLUSTRATION

In the main interface, press  key, choose **2.Parameters Setting** and press  again to enter parameter password confirmation interface.

Press  and input the corresponding password 0~9; press  key to right move the bit, at fifth bit press  key to check password. If password is correct, it enters parameter setting interface, otherwise, it exits directly. Factory default password is 00318.



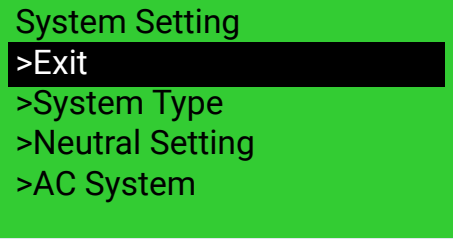

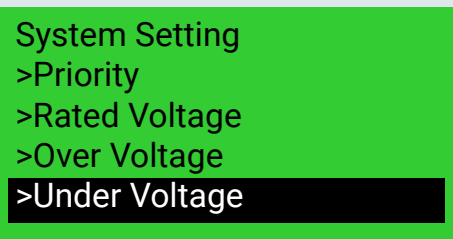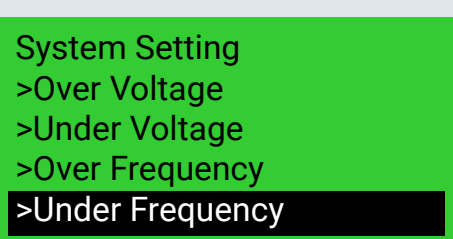
▲NOTE: In parameter setting page, press  longer and it can exit parameter setting menu directly and return to main interface.

 <p>>Exit >Module Setting >System Setting >Timer Setting >Input Port Setting</p>	<p>Press  key to choose parameters (the current line was highlighted with black) and then press  key to confirm, and it can enter into the corresponding display screen. Select >Exit and it will return to main display</p>
 <p>>System Setting >Timer Setting >Input Port Setting >Output Port Setting >Function Setting</p>	

 <p>System Setting >Exit >System Type >Neutral Setting >AC System</p>	<p>Press  key to choose parameters (the current line was highlighted with black) and then press  key to confirm, and it can enter into the corresponding display screen. Select >Exit and it will return to previous menu</p>
 <p>System Setting >Priority >Rated Voltage >Over Voltage >Under Voltage</p>	
 <p>System Setting >Over Voltage >Under Voltage >Over Frequency >Under Frequency</p>	

Under Voltage
Set Value: 00080%
Return Value: 00085%

Under Voltage
Set Value: 00080%
Return Value: 00085%

Press  button and it can scroll screen in parameter setting; In current parameter setting screen, press  and it will enter into configuration status; the first digit of the current parameter was highlighted with black. Press  to adjust the set value; and press  key to right move the bit, at last bit press  key to confirm the set value. If the set value is in the range, the setting is successful; if it is out of the range, then the setting is invalid.

6.2 PARAMETERS TABLE

Table 8 Parameter Configuration Items

No.	Item	Range	Default	Description
01	1# Volts Normal Delay	(0-9999)s	10	The delay from #1 power abnormal to normal
02	1# Volts Abnormal Delay	(0-9999)s	5	The delay from #1 power normal to abnormal
03	2# Volts Normal Delay	(0-9999)s	10	The delay from #2 power abnormal to normal
04	2# Volts Abnormal Delay	(0-9999)s	5	The delay from #2 power normal to abnormal
05	Close Time	(0-20)s	5	Pulse time of close relay. When it is 0, means output constantly
06	Open Time	(1-20)s	5	Pulse time of open relay
07	Transfer Interval	(0-9999)s	1	Interval time from 1# switch off to 2# switch on; or from 2# switch off to 1# switch on
08	Transfer Delay Expired	(0-20.0)s	0.0	The continuous output time of the close relay after the module receives a closing signal
09	Again Close Delay	(0-20.0)s	1.0	When the breaker fail to open for the first time, then the module will close for the second time and the Again Close Delay begins, after the delay has expired, if still failed to open the second time, the module will send out fail to open alarm
10	Again Open Delay	(0-20.0)s	1.0	When the breaker fail to close for the first time, then the module will open for the second time and the Again Open Delay begins, after the delay has expired, if still failed to close the second time, the module will send out fail to close alarm
11	Gen Start Delay	(0-9999)s	1	When voltage is abnormal, start delay begins, after the start delay has expired, start signal will be initiated
12	Gen Stop Delay	(0-9999)s	5	After the genset is start, when voltage is normal, stop delay begins, after the stop delay has expired, stop signal will be initiated

No.	Item	Range	Default	Description
13	Cycle Running Time	(1-1440)min	720	Gens cycle start running time
14	Cycle Stop Time	(1-1440)min	720	Gens cycle stop time, that is to say it is the cycle start running time of the other genset
15	Genset Supply Delay	(0-9999)s	60	Failure identification time during genset cycle start running
16	Rated Voltage	(100-600)V	230	AC system rated voltage
17	Over Voltage	(100-150)%	120	Upper limit value of voltage; it is abnormal if the value has exceeded the set value
18	Over Voltage Return	(100-150)%	115	Upper limit return value of voltage; it is normal only when the value has fallen below the set value
19	Under voltage	(50-100)%	80	Lower limit value of voltage; it is abnormal if the value has fallen below the set value
20	Under Voltage Return	(50-100)%	85	Lower limit return value of voltage; it is normal only when the value has fallen below the set value
21	Over Frequency	(0.0-75.0)Hz	55.0	Upper limit value of frequency; it is abnormal if the value has exceeded the set value
22	Over Frequency Return	(0.0-75.0)Hz	52.0	Upper limit return value of frequency; it is normal only when the value has fallen below the set value
23	Under Frequency	(0.0-75.0)Hz	45.0	Lower limit value of frequency; it is abnormal if the value has fallen below the set value
24	Under Frequency Return	(0.0-75.0)Hz	48.0	Lower limit return value of frequency; it is normal only when the value has fallen below the set value
25	Module Address	(1-254)	1	Communication address
26	Password		00318	For entering advanced parameters setting
27	System Type	(0-3)	0	1.1# Mains 2# Gens 2.1# Gens 2# Mains 3.1# Mains 2# Mains 4.1# Gens 2# Gens
28	Neutral Setting	(0-2)	1	0. Two Breaking 1. One Breaking 2. No Breaking.
29	AC System	(0-3)	0	0: 3P4W; 1: 3P3W; 2: 1P; 3: 2P3W
30	Priority Select	(0-2)	0	0. 1# Priority 1. 2# Priority 2. No Priority
31	Aux. Output 1	(0-31)	15	0 Not Used
32	Aux. Output 2	(0-31)	12	1 Critical Fault
33	Aux. Output 3	(0-31)	24	2 Transfer Failure
34	Aux. Output 4	(0-31)	27	3 Warning Output 4 Alarm Output (Delay)

No.	Item	Range	Default	Description
				5 1# Voltage Normal 6 1# Voltage Abnormal 7 2# Voltage Normal 8 2# Voltage Abnormal 9 Reserved 10 Auto Status Output 11 Manual Status Output 12 Gens Start Output (N/O) 13 Gens Start Output (N/C) 14 1# Close Output 15 1# Open Output 16 2# Close Output 17 2# Open Output 18 Common Alarm Output 19 Scheduled Start 20 1# Closed Output 21 2# Closed Output 22 1# Gen Start Output (N/O) 23 2# Gen Start Output (N/O) 24 ATS Power A Phase 25 ATS Power B Phase 26 ATS Power C Phase 27 ATS Power N Phase 28 1# 2# Voltage Abnormal 29 Reserved 30 Reserved 31 Reserved
35	Aux. Input 1	(0-13)	1	0. Not used
36	Aux. Input 2	(0-13)	0	1. Forced Open 2. Test Off-load 3. Test On-load 4. Lamp Test 5. 1# Gens Fault 6. 2# Gens Fault 7. Remote Start 8. Breaker Trip 9. 1#Priority 10. 2#Priority 11. Reserved 12. Reserved 13. Reserved

6.3 INPUT/OUTPUT FUNCTION DESCRIPTION

Table 9 Input Port Function Description

Item	Description
0 Not used	Invalid
1 Forced Open	Applicable only for ATS with breakings; when it is active, ATS will transfer to 0 position no matter in manual or auto mode
2 Test Off-load	Genset start is outputted and when Mains is normal, Gen doesn't close
3 Test On-Load	Genset start is outputted and When Mains is normal, Gen closes
4 Lamp Test	LED indicators on the panel are all on; LCD backlight is on; LCD screen is dark
5 1# Gens Fault	1# genset fault occurs and it prohibits to start 1# genset (used for cyclical start)
6 2# Gens Fault	2# genset fault occurs and it prohibits to start 2# genset (used for cyclical start)
7 Remote start	It is a must for genset start cyclically
8 Breaker Trip	
9 1#Priority	
10 2#Priority	
11 Reserved	
12 Reserved	
13 Reserved	



Table 10 Output Port Function Description

Item	Description
0 Not Used	Invalid
1 Critical Fault	It includes switch transfer failure;
2 Transfer Failure	It includes 1# close failure, 1# open failure, 2# close failure, 2# open failure
3 Warning Alarm Output	General warnings include 1# phase sequence wrong, 2# phase sequence wrong, and force to open
4 Alarm Output (delay)	It outputs for 60s continuously for critical fault alarms
5 1# Voltage Normal	It will output when #1 voltage is normal
6 1# Voltage Abnormal	It will output when #1 voltage is abnormal
7 2# Voltage Normal	It will output when #2 voltages is normal
8 2# Voltage Abnormal	It will output when #2 voltages is abnormal
9 Reserved	
10 Auto Status Output	It will output in auto mode
11 Manual Status Output	It will output in manual mode
12 Gens Start Output (N/O)	It outputs when genset starts (Relay closed)
13 Gens Start Output (N/C)	It outputs when genset starts (Relay opened)
14 1# Close Output	1# switch close signal output
15 1# Open Output	1# switch open signal output as one breaking
16 2# Close Output	2# switch close signal output

Table 10 Output Port Function Description



Item	Description
17 2# Open Output	2# switch open signal output
18 Common Alarm Output	It includes critical fault alarm and warning alarm
19 Scheduled Start	Scheduled test function starts
20 1# Closed Output	#1 switch close status output
21 2# Closed Output	#2 switch close status output
22 1#Gen Start Output (N/O)	It issues 1# oil engine start signal
23 2#Gen Start Output (N/O)	It issues 2# oil engine start signal
24 ATS Power A Phase	ATS power supply
25 ATS Power B Phase	
26 ATS Power C Phase	
27 ATS Power N Phase	
28 1#2# Voltage Abnormal	It outputs when 1# voltage and 2# voltage are abnormal
29 Reserved	
30 Reserved	
31 Reserved	




7 EVENT LOG

In the main screen, press  key and select **3 Event log**, and then press  key again confirm, the screen will show the event log information:

```

1# Close           01/50
1# Volt normal
2# Under Volt
2016-06-27       08:43:14
Long pressing Set to exit
    
```

Press  key to select the corresponding record, and press  key to enter into detailed information interface.

In the detailed information interface, press  key and it can display the record information circularly, which includes 1#/2# volt status, specific voltage, frequency and time and date. Press  and it can exit the current interface, while press  for a long time and it can return to main screen.

Event log information includes: event log type, 1# power supply, 2# power supply, 1# 3-phase voltage, 2# 3-phase voltage, 1# frequency, 2# frequency and the record date and time.

```

# 1 Close           01/50
1# Volt normal
2# Under Volt
2016-06-27       08:43:14
Long pressing Set to exit
    
```

```

# 1 Close           01/50
U1 L-N 220  220  220V
U2 L-N 0    100  220V
2016-06-27   08:43:14
Long pressing Set to exit
    
```

```

# 1 Close           01/50
F1 50.0Hz   F2 50.1Hz


2016-06-27   08:43:14
Long pressing Set to exit
    
```

Table 11 Event Log Types

No.	Type	Description
1	1# Close	1# close signal output
2	2# Close	2# close signal output
3	1# Fail to Close	1# power supply cannot connect to load
4	2# Fail to Close	2# power supply cannot connect to load
5	1# Fail to Open	1# power supply cannot disconnect to load
6	2# Fail to Open	2# power supply cannot disconnect to load
7	Breaker Trip	The input is active
8	Forced Open	Forced open input is active

8 SCHEDULED START

In the main screen, press  key and select **4 Time start**, and the pressing  key confirm, the screen will show the scheduled start interface:

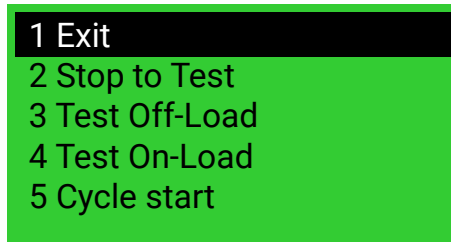

Scheduled start cycle: includes inhibit start; start the genset once, weekly or monthly.


Load set: start the generator with load or without load.



Start time: the date and time of the genset starting.

Duration time: generator continuous run time can be set to duration of maximum time for 99 hours and 59 minutes.

9 COMMISSIONING

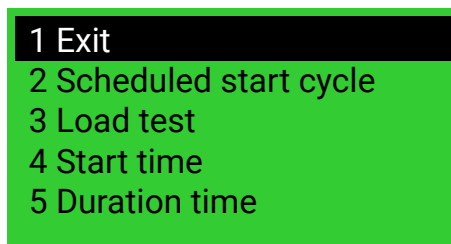In the main screen, press  key and select **5 Commissioning**, and then press  key to confirm, the screen will show the commissioning interface:



Press  key to select corresponding function, and press  key to confirm.

Test off-Load: It will send out a start signal immediately. After gen voltage is normal, if mains voltage is normal, the ATS will not act. If mains voltage is abnormal, ATS will transfer the load to generator. When mains volt recovers to normal, the ATS will transfer the load to mains. At this time the start generator signal still continuously outputs.

Test on-Load: It will send out a start generator signal immediately. After gen voltage is normal, the ATS will transfer the load to mains immediately regardless the mains is normal or not.

Stop commissioning: When Commissioning has been chosen, and if this item is selected, genset start signal will disconnect immediately and it will stop **Test off-load** or **Test On-load** operation.


Cycle start: When this is chosen, oil engine start signal will output circularly according to master status. Circular output time can be set by the users. If oil engine fault occurs, it won't send start signal to the oil engine. If it transfers to manual mode, it will keep current status and stop circular start time counting. Requirements needed:




1. In automatic mode.
2. Set output to 1# Gen Start Output (N/O Output) and 2 # Gen Start Output (N/O Output).
3. Set input to remote start input.
4. <Cycle Run Time> and <Cycle Stop Time> should be programmed.
5. Set the system type as 1# Gens & 2# Gens.
6. Set proper < Wait Running > time, and set default delay to 60s.

▲ NOTE: In manual mode, if the commissioning input is active, generator start-signal will output immediately, but the ATS will not transfer automatically except for operation manually by pressing key on the front panel.

10 DATE AND TIME SETTING

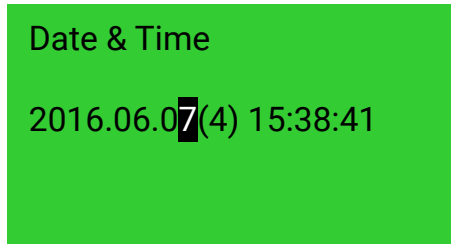
In the main screen, press  key and select **6 Date & Time**, and then press  key again to confirm, the screen will show the Date & Time Set interface:





Press  to input the corresponding number 0~9; press  key to right move the bit, at the last bit press  key to update the date and time.

11 LANGUAGE SETTING

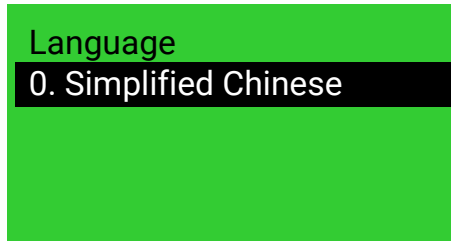In the main screen, press  key and select **7 Language**, press  again to enter into language setting interface:




Press  to select the language and press  to confirm the setting.


Language option: Simplified Chinese/English.

12 CONTROLLER INFORMATION

In the main screen, press  key and select **8 Controller** information and then press  key again to enter controller information interface as below:

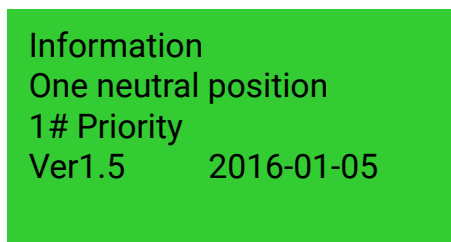





Display contents include current breaking positions setting, transfer priority choice and controller version and date.

Longer press  key and it will exit and return to main screen.

13 ATS OPERATION

13.1 MANUAL OPERATION

Press  and manual mode indicator is on, which means controller is in manual mode.

- 1) Press , 1# close relay outputs immediately, if 1# close input is active, the 1# power supply connects to load.
- 2) Press , 2# close relay outputs immediately, if 2# close input is active, the 2# power supply connects to load.
- 3) Press , 1#/2# open relay outputs immediately, if 1#/2# close input is inactive, the 1#/2# power supply disconnects with load.

▲ NOTE: For the ATS without neutral position, it is invalid to press  key.

13.2 AUTOMATIC OPERATION

Auto mode indicator is on, which means controller is in auto mode. Controller can transfer to 1# load or 2# load automatically.

13.3 ATS POWER SUPPLY

ATS power supply is provided by the controller smartly. Only if there is one channel normal voltage can it ensure normal ATS power, and make it work normally.

Users shall choose power supply voltage (phase or line) based on ATS type. If it is phase voltage power, connect the phase voltage (A phase) of 1# and 2# with N/C Terminal 8 and N/O Terminal 10 of programmable port 3, connect N phase of 1# and 2# with N/C Terminal 13 and N/O Terminal 11 of programmable port 4, then connect the COM of programmable port 3 and programmable 4 with ATS power supply. At last power on the controller, and enter parameter configuration page; set port 3 to corresponding phase voltage “ATS power A phase”, and set port 4 to “ATS power N phase”. If ATS is supplied by line voltage, the set method is as above. You only need to change N phase to phase voltage connection and for port 4 you also need to change according to settings.

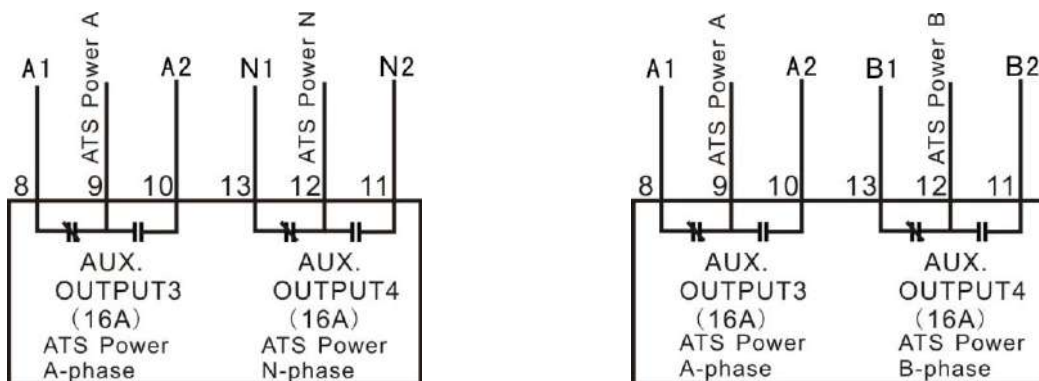


Fig.2 Wiring Connection

▲ NOTE: Normally Close (N/C) input voltage must come from 1# voltage.

14 FAULT ALARM

Table 12 Critical Fault

No.	Items	Type	Description
1	1# Gens Fault	Fault	1# genset fault occurs.
2	1# Fail to Close	Fault	1# close failure occurs.
3	1# Fail to Open	Fault	When 1# open failure occurs.
4	2# Gens Fault	Fault	2# genset fault occurs.
5	2# Fail to Close	Fault	2# close failure occurs.
6	2# Fail to Open	Fault	When 2# open failure occurs.
7	Breaker Trip	Fault	Trip input is active.

Table 13 Warning Types

No.	Items	Type	Description
1	1# Phase Sequence Wrong	Warning	1# phase sequence is not A-B-C.
2	2# Phase Sequence Wrong	Warning	2# phase sequence is not A-B-C.
3	Forced Open	Warning	Forced open input is active.

15 COMMUNICATION CONFIGURATION

ATBS C56 series controller has LINK communication port, which can provide a simple and practical dual power transfer management method for factories, telecom, industrial and civil buildings by using Modbus protocol via PC or system software and realize “remote control, remote measuring, remote communication” functions.

Communication Parameters:

Module address 1 (range: 1-254, User definable)

Baud rate 9600 bps

Data bit 8-bit

Parity bit None

Stop bit 2-bit

NOTE: Select DC power supply to keep the continuity of communication.

16 DESCRIPTION OF CONNECTING TERMINALS

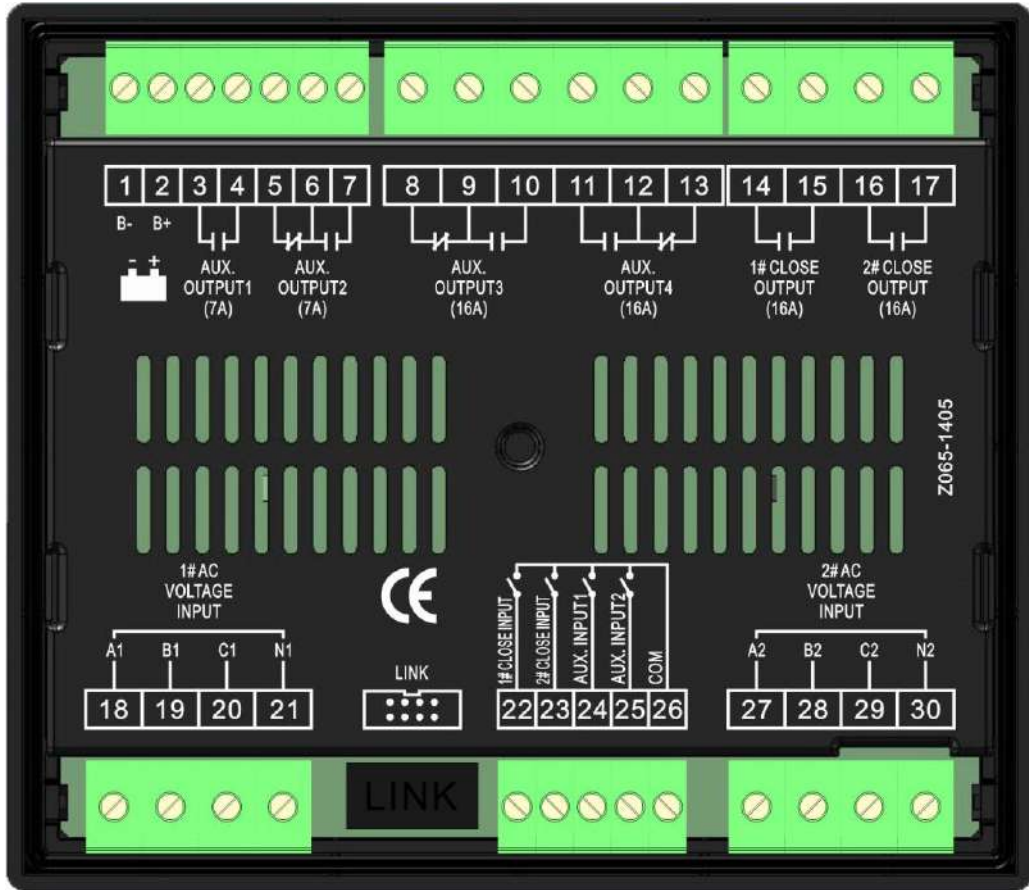


Fig.3 Back Panel

Table 14 Terminal Function Description

No.	Functions	Description	Remark
1	B-	Connects with negative of starter battery.	DC input B-
2	B+	Connects with positive of starter battery.	DC(8-35)V, controller power supply
3	Aux. Output 1	Default: 1# open output	Relay contact output; Volts free; Rated 7A
4			
5	Aux. Output 2	N/C	Relay contact output; Volts free; Rated 7A
6		COM	
7		N/O	
8	Aux. Output 3	N/C	Relay contact output; Volts free; Rated 16A
9		COM	
10		N/O	
11	Aux. Output 4	N/O	Relay contact output; Volts free; Rated 16A
12		COM	
13		N/C	
14	1# Close Output	Relay contact output; Volts free.	Relay contact output; Volts free; Rated 16A
15			
16	2# Close Output	Relay contact output; Volts free.	Relay contact output; Volts free; Rated 16A
17			
18	A1	1# AC System 3P4W voltage input	For single phase, only connect A1, N1
19	B1		
20	C1		
21	N1		
22	1# Close Input	Detect 1# ATS close status. Auxiliary contact input.	Ground connected is active
23	2# Close Input	Detect 2# ATS close status. Auxiliary contact input.	Ground connected is active
24	Aux. Input 1	User-defined.	Ground connected is active
25	Aux. Input 2	User-defined.	Ground connected is active
26	COM	GND	
27	A2	2# AC 3P4W voltage input	For single phase, only connect A2, N2
28	B2		
29	C2		
30	N2		
LINK	Communication Port	Used for PC communication/ software updating.	

17 TYPICAL WIRING DIAGRAM

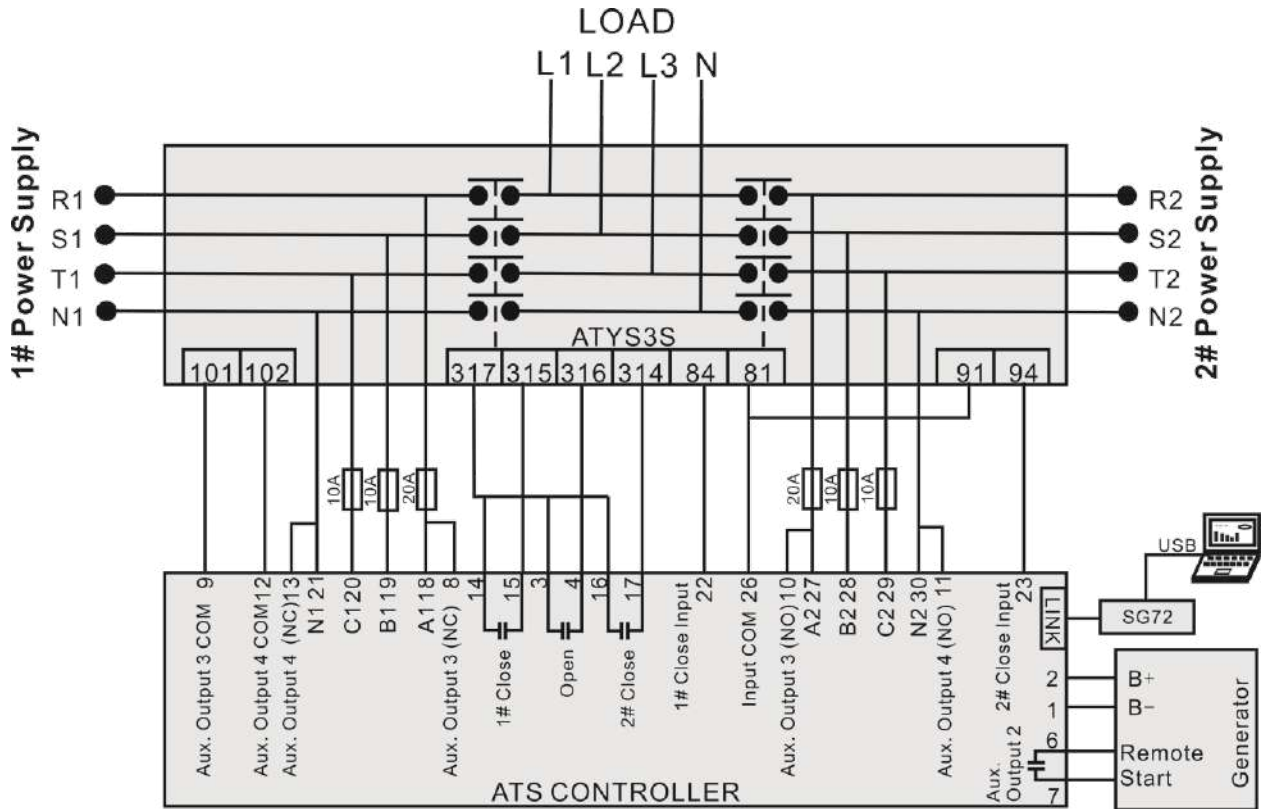


Fig.4 ATYS3S Application Diagram

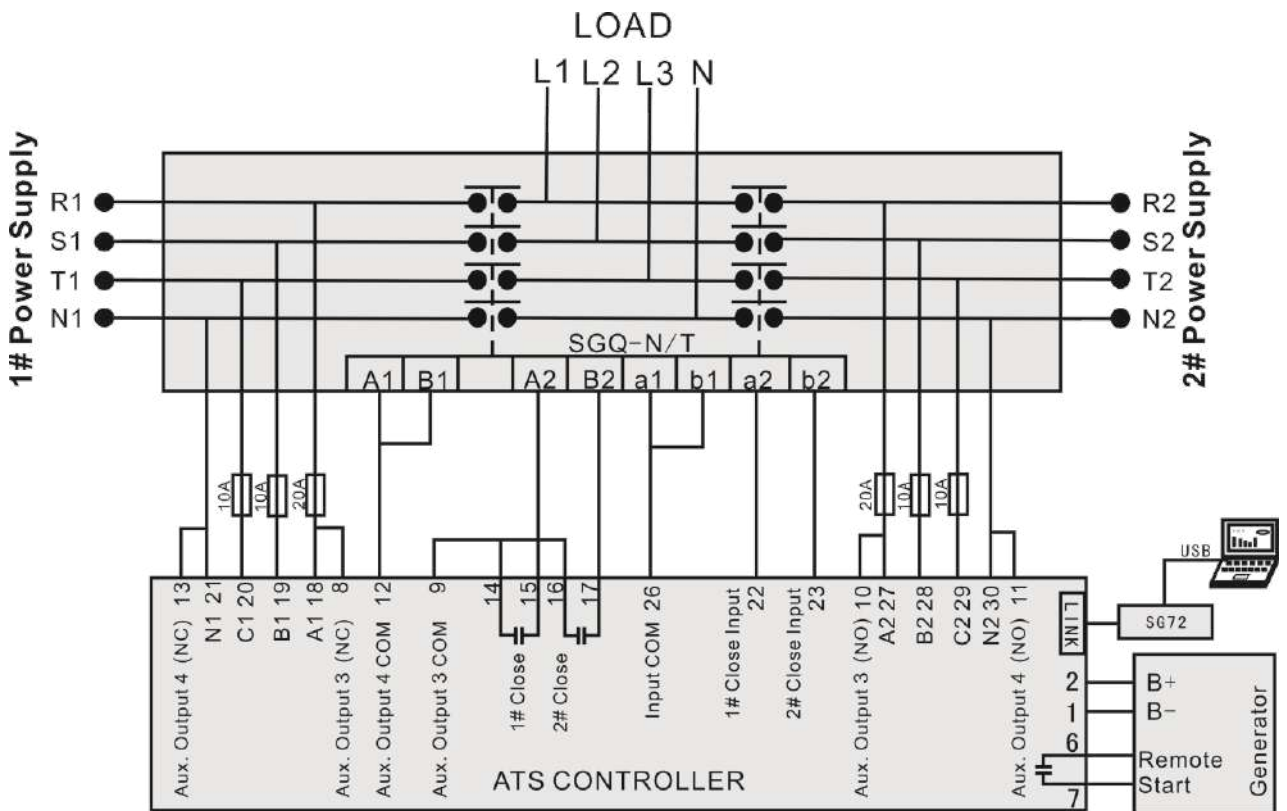


Fig.5 SGQ-N/T Application Diagram

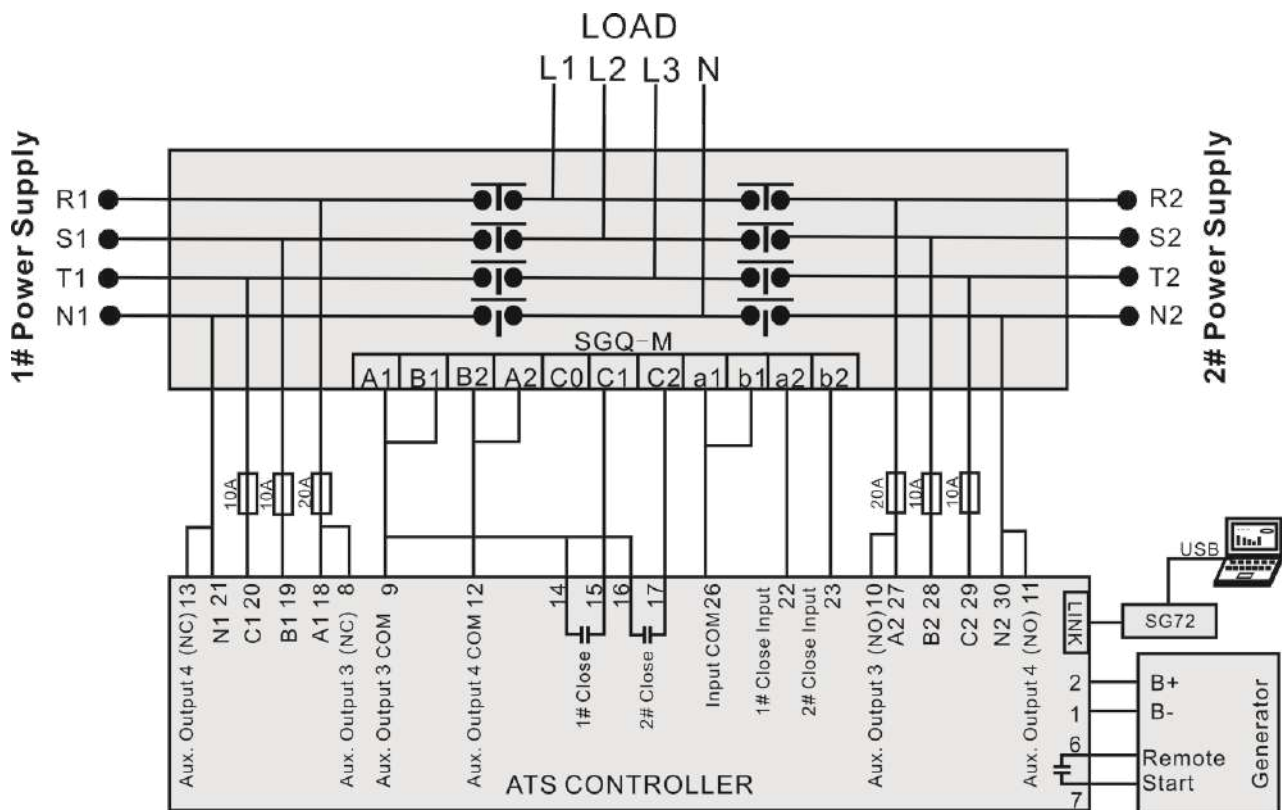


Fig.6 SGQ-M Application Diagram

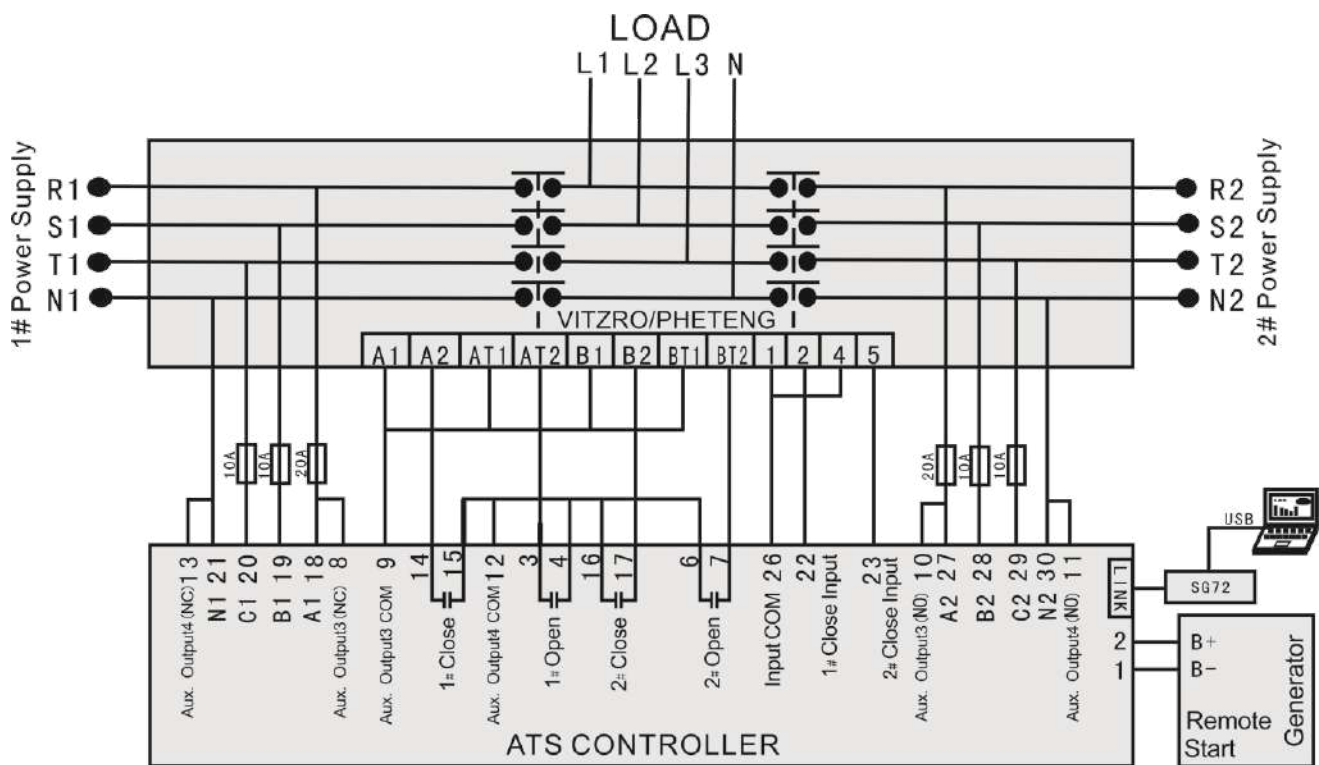


Fig.7 VITZRO/PHETENG Application Diagram

NOTE:

- Set auxiliary output 1 as: 15: 1# Open Output;
- Set auxiliary output 2 as: 17: 2# Open Output;
- Set auxiliary output 3 as: 24: ATS power A-phase;
- Set auxiliary output 4 as: 27: ATS power N-phase.

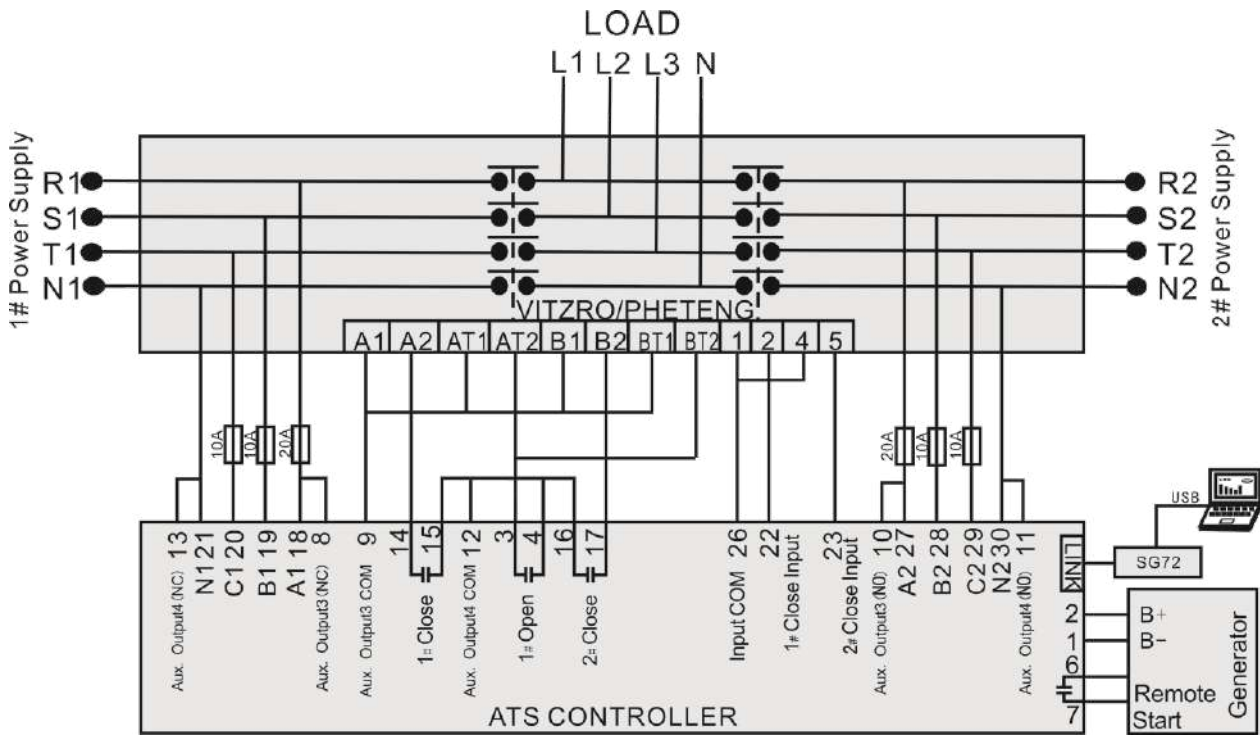


Fig.8 VITZRO/PHETENG (Generator Start Control)

NOTE:

- Set auxiliary output 1 as: 15: 1# Open Output;
- Set auxiliary output 2 as: 12: Gen Start Output (N/O);
- Set auxiliary output 3 as: 24: ATS power A-phase;
- Set auxiliary output 4 as: 27: ATS power N-phase.

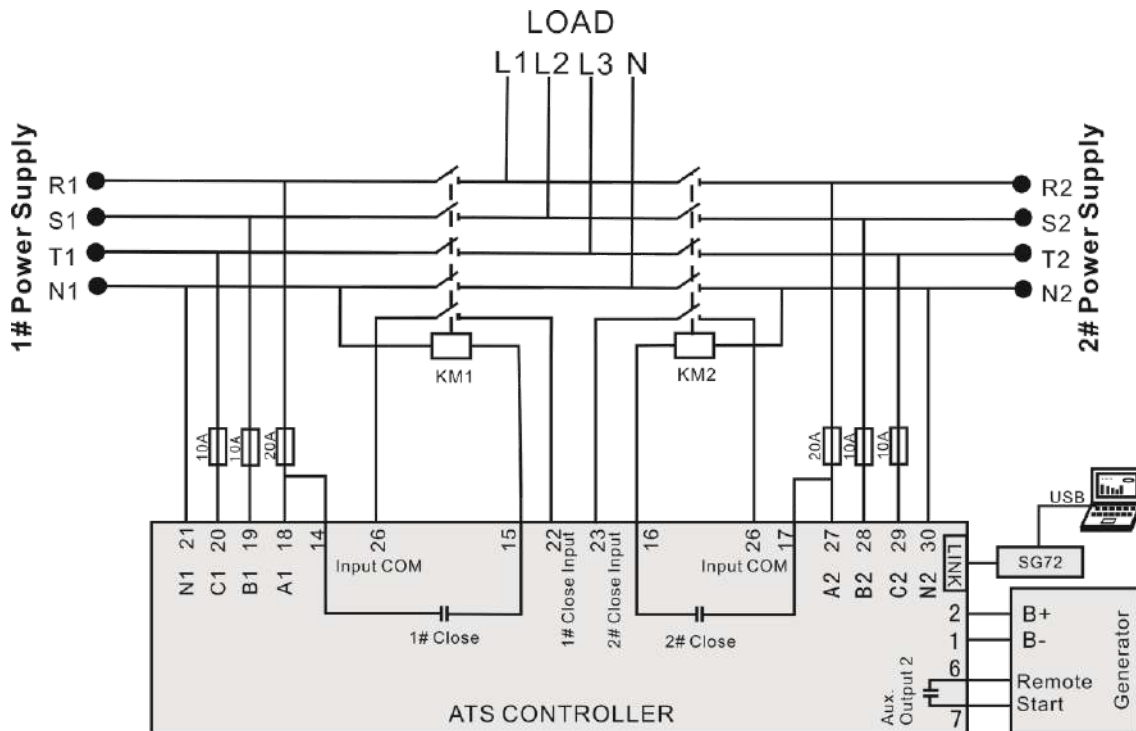


Fig.9 Contactor Wiring Diagram

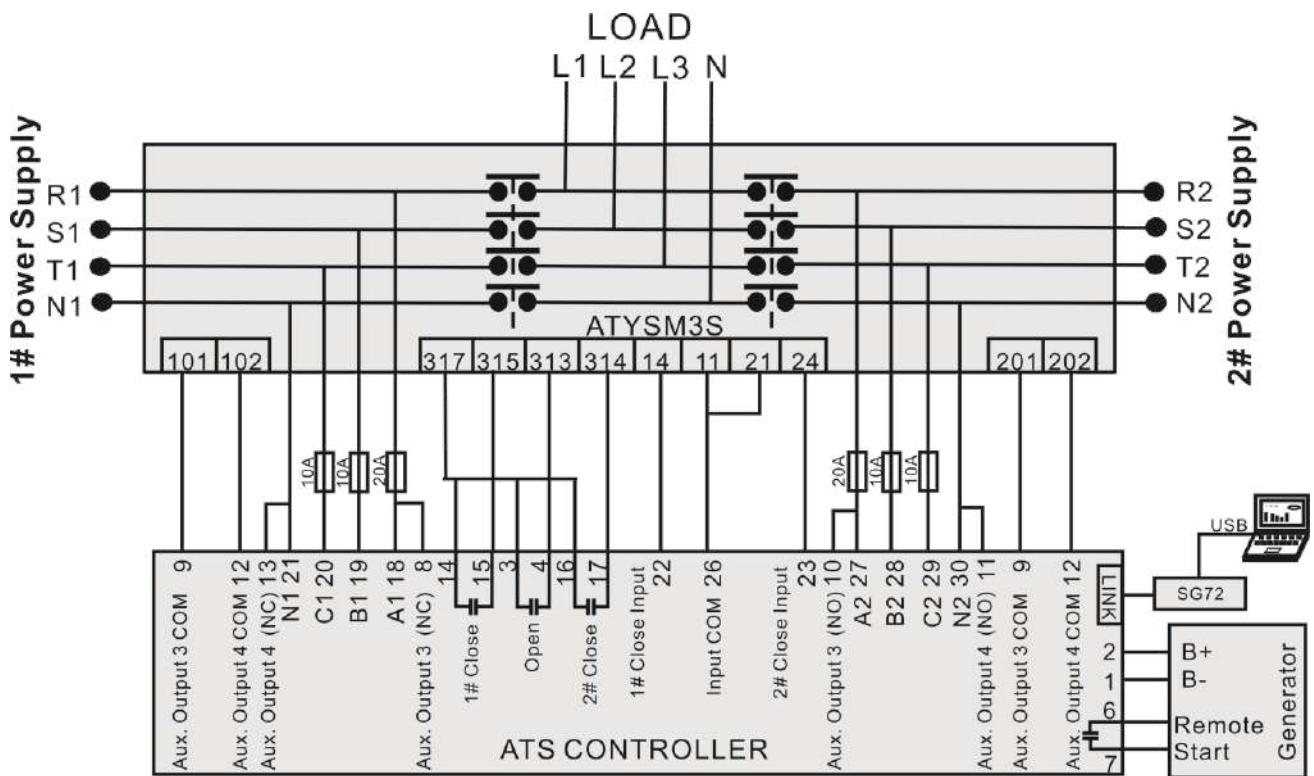


Fig.10 ATYSM3S Wiring Diagram

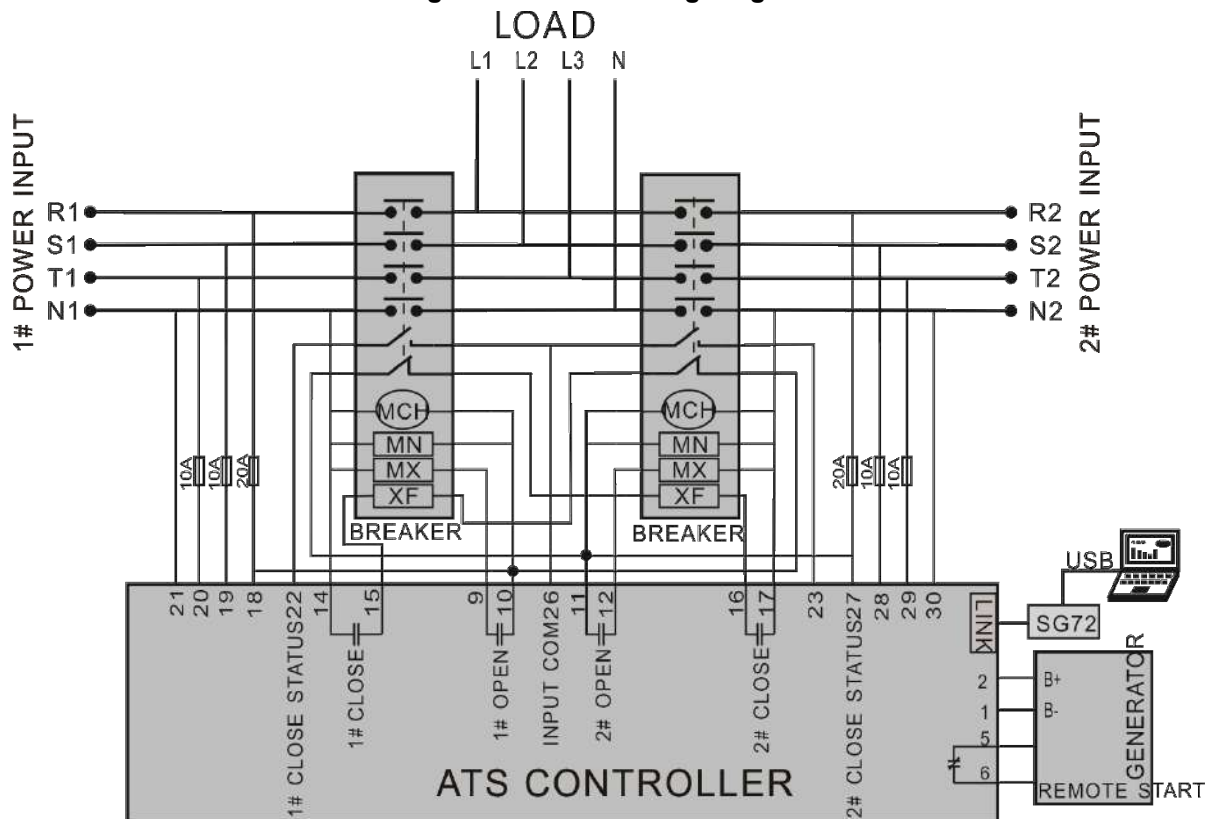


Fig.11 Breaker Application Diagram

MCH: Energy Storage Motor; MN: Under Voltage Trip; MX: Open Coil; XF: Close Coil

NOTE:

- Set Aux. output 3 as 15: 1# open output;
- Set Aux. output 4 as 17: 2# open output;
- Set Aux. output 2 as 12: oil engine start N/C output.

NOTE: Choose fuse capacity based on on-site actual power consumption and do not take the fuse in the diagram as standard; if there is not DC supply, motor start control chooses replay N/C output. For ACB application please refer to breaker application diagram, and switch trip must connect with controller input in usage.

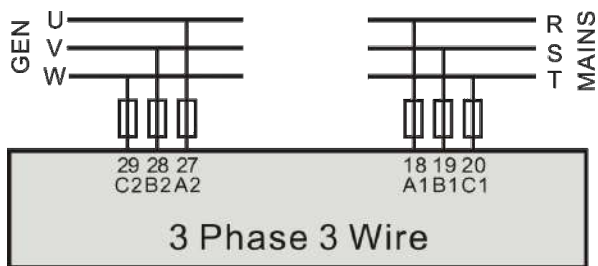


Fig.12 3P3W Wiring Connection (take 1#Mains 2#Gens as an example)

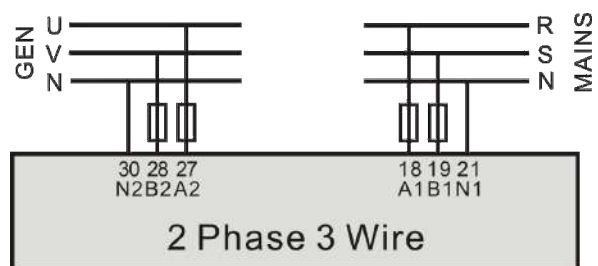


Fig.13 2-phase 3-wire Wiring Diagram (take 1#Mains 2#Gens as an example)

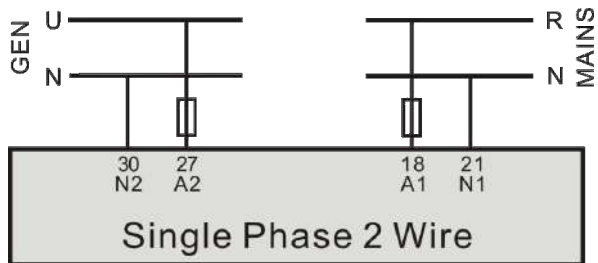


Fig.14 Single phase 2-wire Wiring Diagram (take 1#Mains 2#Gens as an example)

18 INSTALLATION

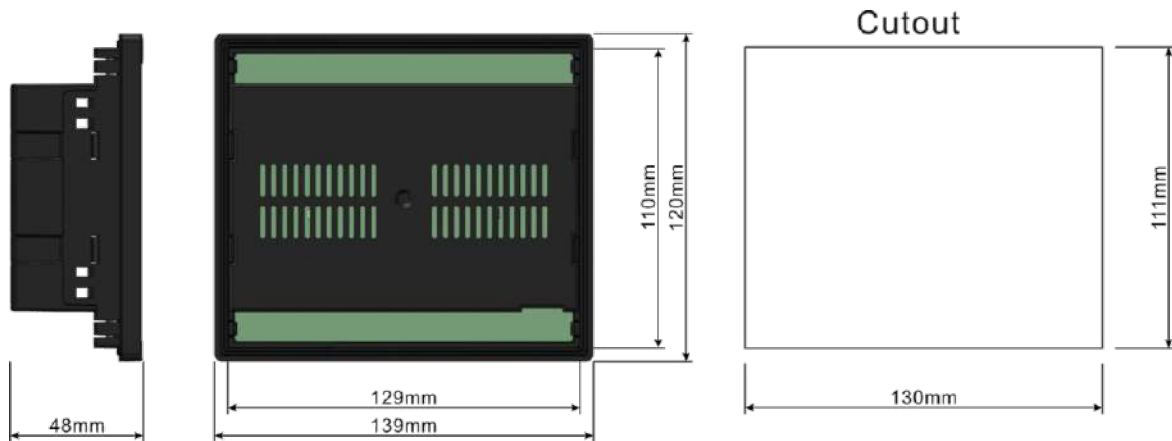


Fig.15 Overall Dimensions and Cutout

19 FAULT FINDING

Table 15 Fault Finding

Symptom	Possible Solutions
Controller no response with power	Check battery voltage
LINK communication failure	If SG72 module is fitted, check its connections Check module address in parameters settings
Auxiliary output error	Check auxiliary output connections, pay attention to normally open contact and normally close contact Check the output settings in parameters settings
Auxiliary input abnormal	Check whether aux. input port is GND connected when it's active, and it shall hang up when it is inactive (NOTE: The input port will be possibly destroyed when connected with voltage.)
Genset running while ATS not transfer	Check ATS Check the connection wirings between the controller and the ATS Check ATS breaking is in accordance with the set breaking

Designed by BTB Electric
Add: Orhangazi Mah. Mimsan San. Sit. 1780 sok.
No: 5 Esenyurt / İstanbul / Türkiye
E-mail: sales@btb-electric.com
Web: btb-electric.com



10 | 2023

